

A cost effective single sided cassette banner.



features & benefits

- Removable cassette roller banner
- Compact design
- Quick-change graphic cassettes
- Requires no assembly tools
- Choice of widths from 600mm - 1000mm
- Available in black, silver or anodised silver
- Includes quality foam padded carry bag



hardware specifications	graphic specifications	additional info
<p>Hardware Dimensions (mm) 2200 (h) x 845 (w) x 400 (d) approx.</p> <p>Weight: 5kg approx (including carry bag) (800mm Discovery)</p>	<p>Visible Graphic Dimensions (mm): 2155 (h) x 600 to 1000 (w) approx.</p> <p>Substrate: Add 200mm to graphic length to allow for roller. Material thickness between 225 and 300 microns.</p>	<p>Included in kit: Base, bungee pole set, carry bag and 1 cassette.</p> <p>Availability: Black or Silver powdercoated or Silver anodised</p>


We are continually improving and modifying our product range and reserve the right to vary the specifications without prior notice. All dimensions and weights quoted are approximate and we accept no responsibility for variance. E&OE.

Assembly Instructions


Banner stand assembly



Kit includes: base, bungee pole set and carry bag.

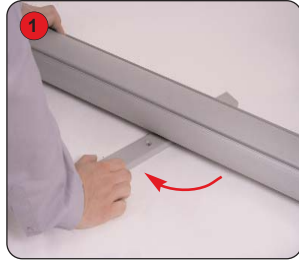

Open out the stabilising foot from the base (threaded hole to rear)

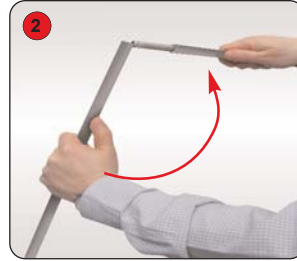

Assemble the bungee pole.



Screw the bungee pole into the stabilising foot.



Lift the top rail to raise the graphic from the base.



Lean the banner stand backwards and continue to extend the graphic.




Secure the graphic into position by locating the bungee pole into the slots in the top rail.

Hold the Top rail whilst lowering the banner (do not drop) to prevent damage to the graphic.

Graphic attachment / cassette loading instructions




Remove the backing paper from the grip rail insert. Align and adhere the grip rail insert to the top edge of the graphic. (attach to rear face)

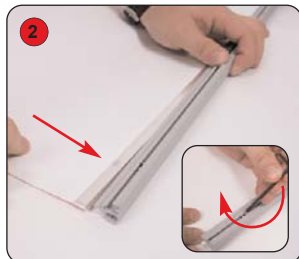

Slide the grip rail insert into the top rail, using a 2.5mm Allen key tighten the grub screws.



Remove the backing paper from the cassette leader. Align and adhere the graphic squarely to the leader. (attach to front face)

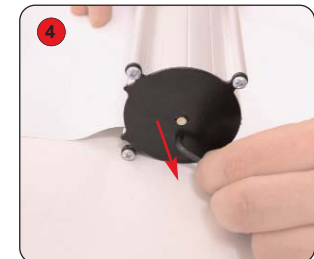

Whilst holding the graphic remove the locking pin from the cassette and gently allow the graphic to retract.

After fitting the graphic should be left for 24 hours before use to ensure the adhesive bonds sufficiently.



Slide down both red locking tabs on the left and right hand sides of the base



Lift open the lid. Place the cassette into the base.



Ensure the cassette is fitted correctly into the base.



Close the lid and slide up both locking tabs.

NB unit shown for steps 5 to 8 is not the Discovery bannerstand, however assembly method is identical.

Note: Opening the cassette may invalidate the product warranty.