 


Event Grade Event Tent

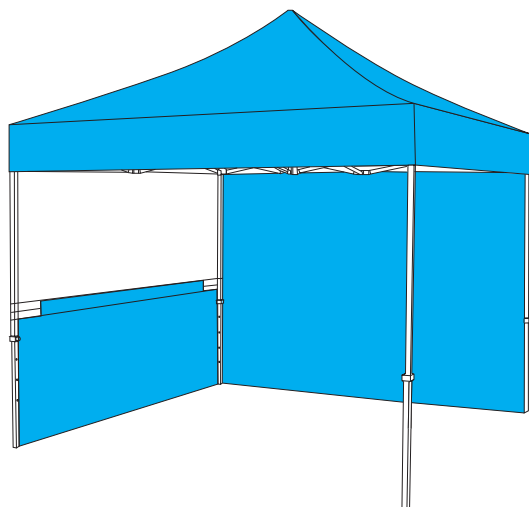

Sizes Available [↗](#)

3x3 M



3M X 4.5M

3M X 6M

Hex 5.5M

ASSEMBLY INSTRUCTIONS

  Remove all products from packaging.

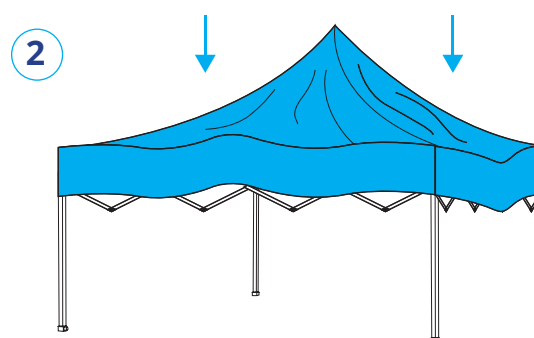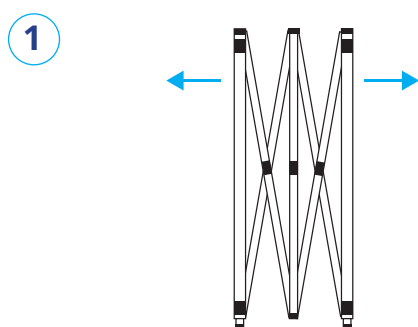


Carefully remove the frame from the packaging and place the frame feet down on a level surface. Progressively expand the tent legs by pulling outward until the tent is almost at its maximum spread. The assistance of multiple people may make this process easier. At this point, do not extend the frame legs yet.

Place the canopy over the top of the frame, ensuring each corner of the canopy fits over a corner of the frame. Connect the Velcro straps around the top of the frame legs on each corner. Fit the centre roof pocket over the centre post head and pull the draw string until it is tight, securing the top of the tent centrally in place.


ASSEMBLY INSTRUCTIONS

 3

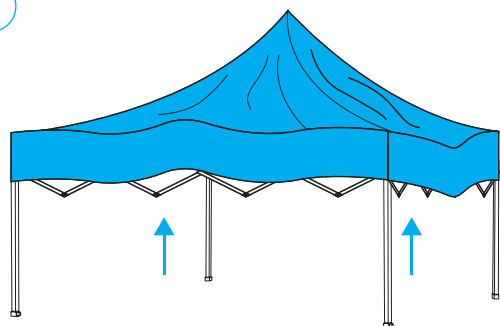

Once the canopy is secured to the frame, continue to pull the frame outwards from the corners and push the truss bars up until the locking pin is securely engaged in each tent leg before progressing. At this point ensure the canopy is fitted suitably and the Velcro straps are tensioned around each leg, and the central valance straps are tensioned around the frame.

 4

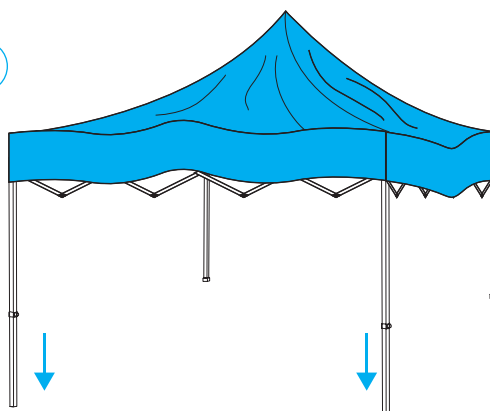

Progressively extend the legs to the desired height. Once the tent is fully erected, place on a level surface and proceed to anchor the tent using either the supplied anchor kit or the additional accessory foot weights.

TAKE DOWN INSTRUCTIONS

1

Release the canopy's central Velcro straps. Pull the locking pin height adjusters to lower the legs gradually moving around the frame until the legs are fully lowered.

2

The canopy can be left on the frame in the collapsed position during storage if being used for regular use, but ensure the canopy is completely dry before storage.

3

Pull the canopy tensioning locking pin adjusters to release the tension. Gradually push the frame inwards from the outside of each corner until the frame is completely collapsed. At this point the tent cover can be fitted by sliding over the top and securing with the buckle at the foot end.

Caution: Be careful not to trap hands or fingers in the frame during collapsing.

