


Event Flags

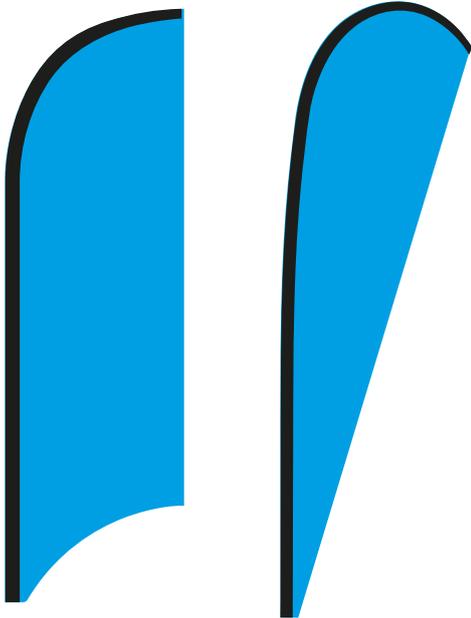

Sizes Available (Height)

Feather flag 2100mm	Tear Drop flag 1850mm	Sail flag 2400mm
Feather flag 3100mm	Tear Drop flag 2900mm	Sail flag 3600mm
Feather flag 4300mm	Tear Drop flag 4000mm	Sail flag 4900mm
Feather flag 5600mm	Tear Drop flag 5400mm	

Recommended

Tokyo Flag 120gsm

ASSEMBLY INSTRUCTIONS

Remove all products from packaging.

- 1 Lay your event Flag out on a flat surface.
- 2 Remove the Pole from the carrier bag.
- 3 Insert the bottom section of the top, thinner pole into the top section of the bottom pole.




ASSEMBLY INSTRUCTIONS

- 4** Push the two poles together to ensure the poles are securely fitted.




- 5** Push the top of the pole with the black nib into the bottom end of the flag sleeve, until the top of the pole reaches the end of the sleeve at the top of the flag.

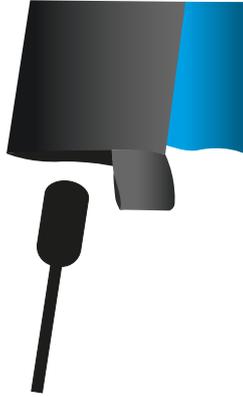


- 6** Located at the bottom of the flag is a bungee with ball. Hook the bungee over the protruding plastic section on the flag pole handle as shown below.



- 7** Your flag should now be ready to insert into your chosen base option.

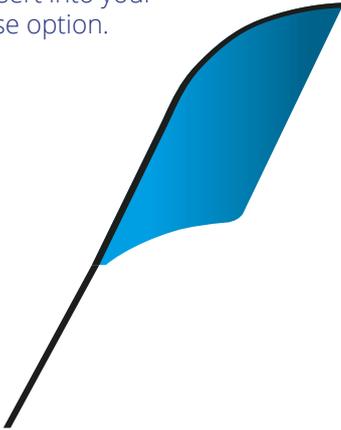

- 8** Ensure the end of the flag pole is fully inserted into the folded webbing pocket at the top edge of the flag.

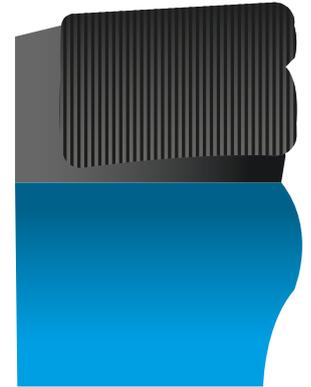

Product information and warnings

- This product has been designed for professional event use.
- Take care and keep away from eyes when assembling poles and attaching flag to the poles.
- Always place on a firm level base.
- Do not use in windy conditions.
- Ensure the product has been correctly assembled before using.
- Remove and dispose of all packaging safely before using.
- Keep away from naked flames and other heat sources.
- Due to continual product development, we reserve the right to change any product or specifications without prior notice.
- All weights and dimensions are approximate, and we accept no liability for any variance.

How to care for your flag

- To get the best out of your flags, we recommend washing prior to use in a 40-degree short cycle wash with standard washing detergent.
- Take care and keep away from eyes when assembling poles and attaching flag to the poles.
- Drip dry only (DO NOT TUMBLE DRY).
- Once your flag is in use, should it become dirty, it is acceptable to wash following the above instructions.
- Dismantle your flag during adverse weather conditions, including strong winds.
- Always ensure rotating adaptor is securely fixed to base (routine check is advisable).
- To avoid damage to your flag, please ensure that the top of the pole is correctly inserted into the reinforced end of the sleeve as shown below (design may vary slightly according to your chosen flag shape).