XG | XPERTS IN GRAPHICS

+44 (0)1280 707 180
sales@xg-group.co.uk
www.xg-group.co.uk

IMAGEWALL | HOW TO GUIDE
HOW TO INSTALL SCREEN MOUNT KIT

ASSEMBLY INSTRUCTIONS

Remove all products from packaging.

1. Note: TV Screen is not included.
Ensure your display system is fully assembled and ready before installing the screen mount.

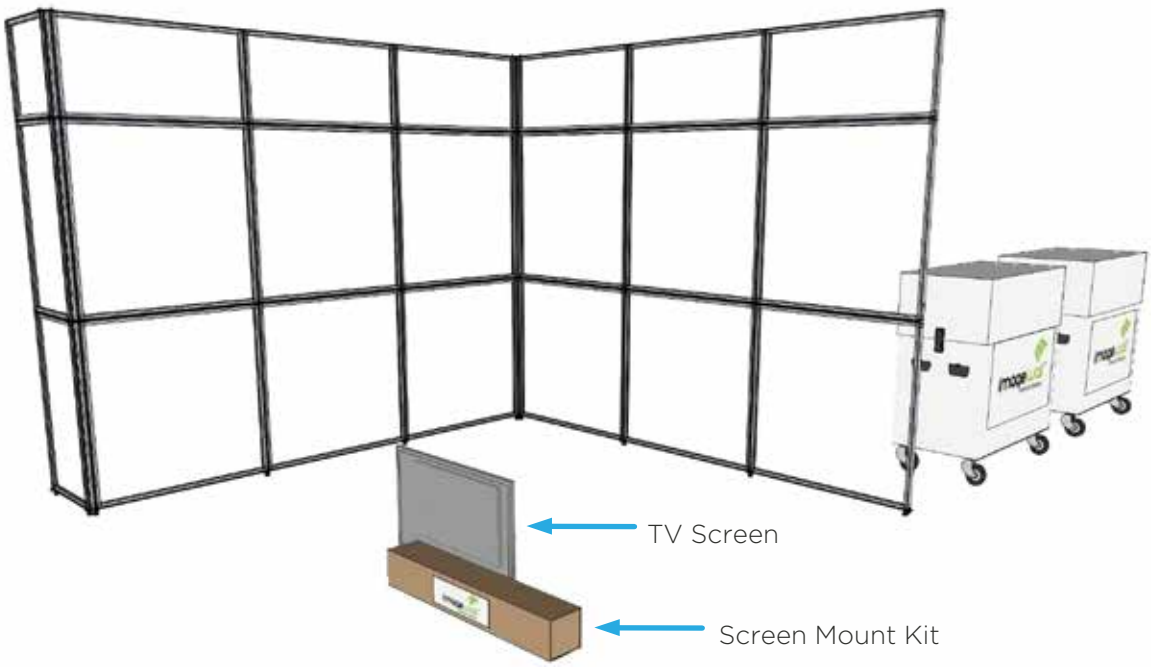

2 Unbox the screen mount and confirm all components listed below are present.

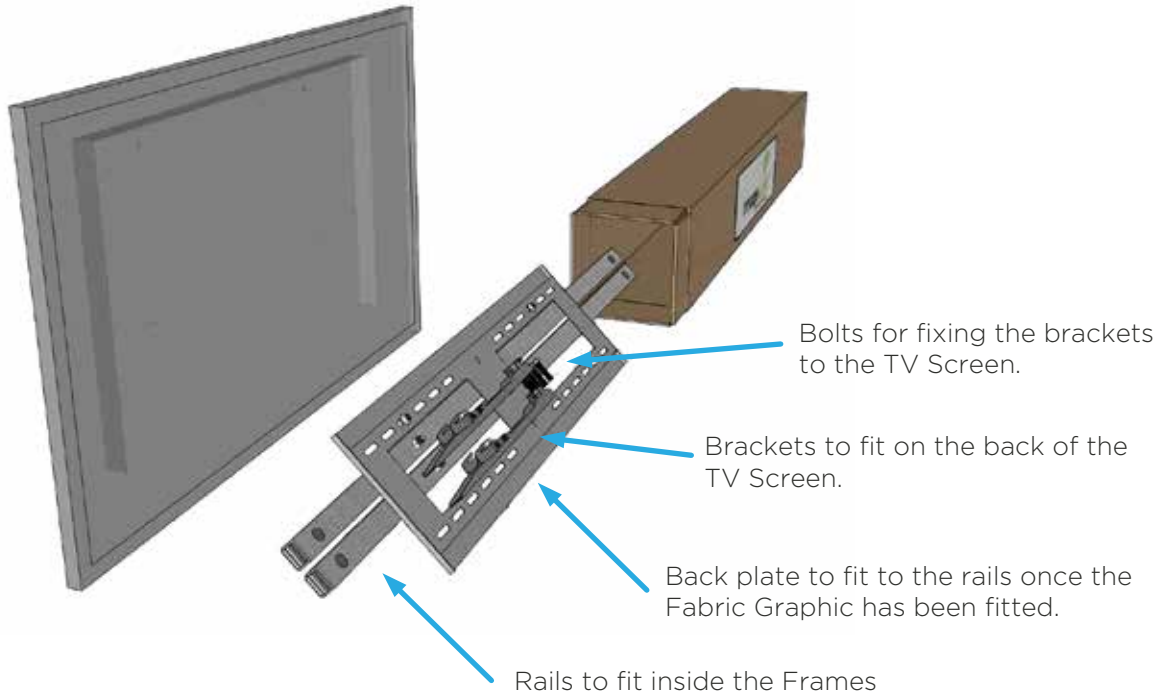

3 Insert the vertical rails into the ImageWall frame where you want the screen to mount.
Make sure they are positioned securely and aligned vertically.
Use the Allen key and bolts (provided) to lock the rails into position inside the frame.
Ensure they are tight so nothing moves.

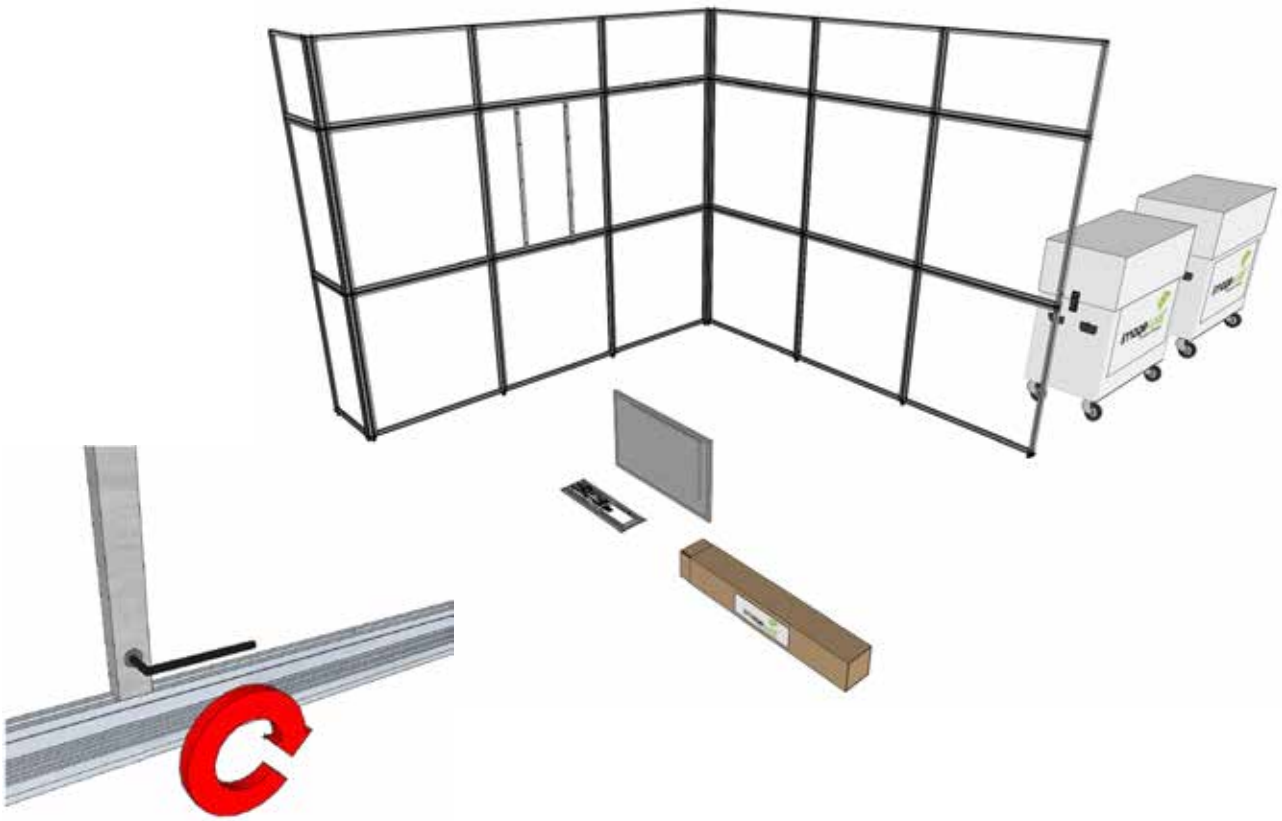

4 Before you install the fabric graphic, check that the mounting back plate fits correctly over the rails and aligns with the screen brackets.

5 Attach the supplied brackets to the back of the TV screen using the provided bolts. Make sure they're tight but do not over-torque.

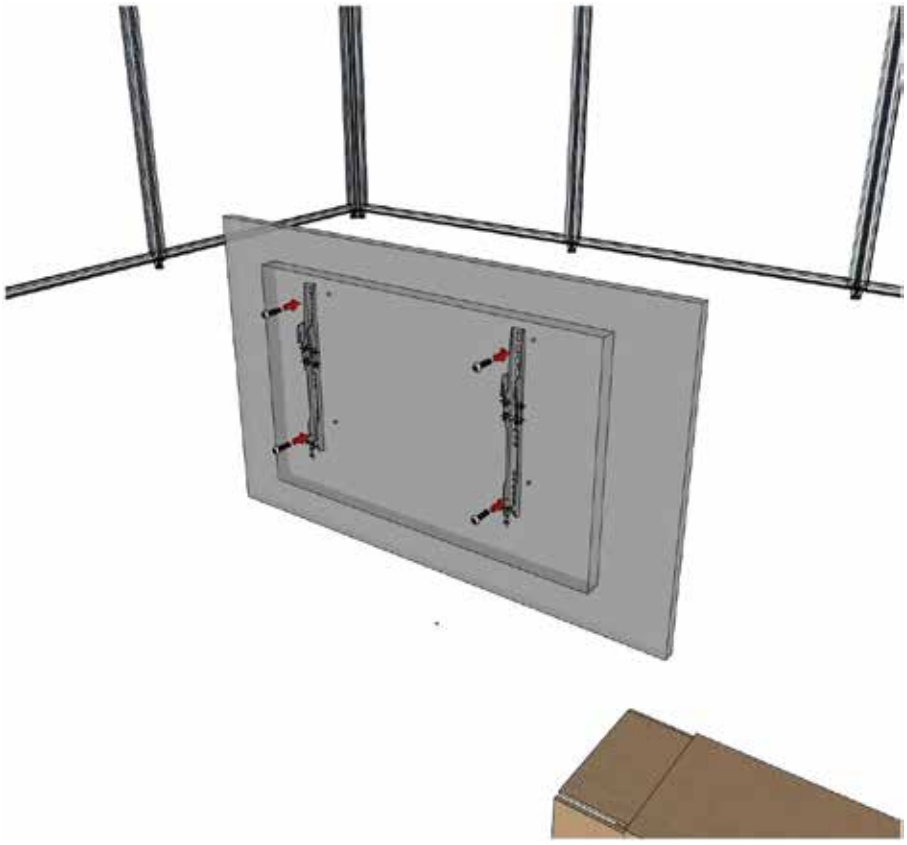

6 Fit your fabric graphic to the frame as normal. When the fabric is in place you will need to prepare it for the screen installation. Where the bracket threads and cables will go through the fabric, carefully slit the graphic so nothing gets pinched or damaged when mounted.
Run any power or signal cables through the openings you cut in the fabric so they will come out cleanly when the screen is mounted.
Slide the back mounting plate over the protruding bolt threads on the rails (from inside the frame).

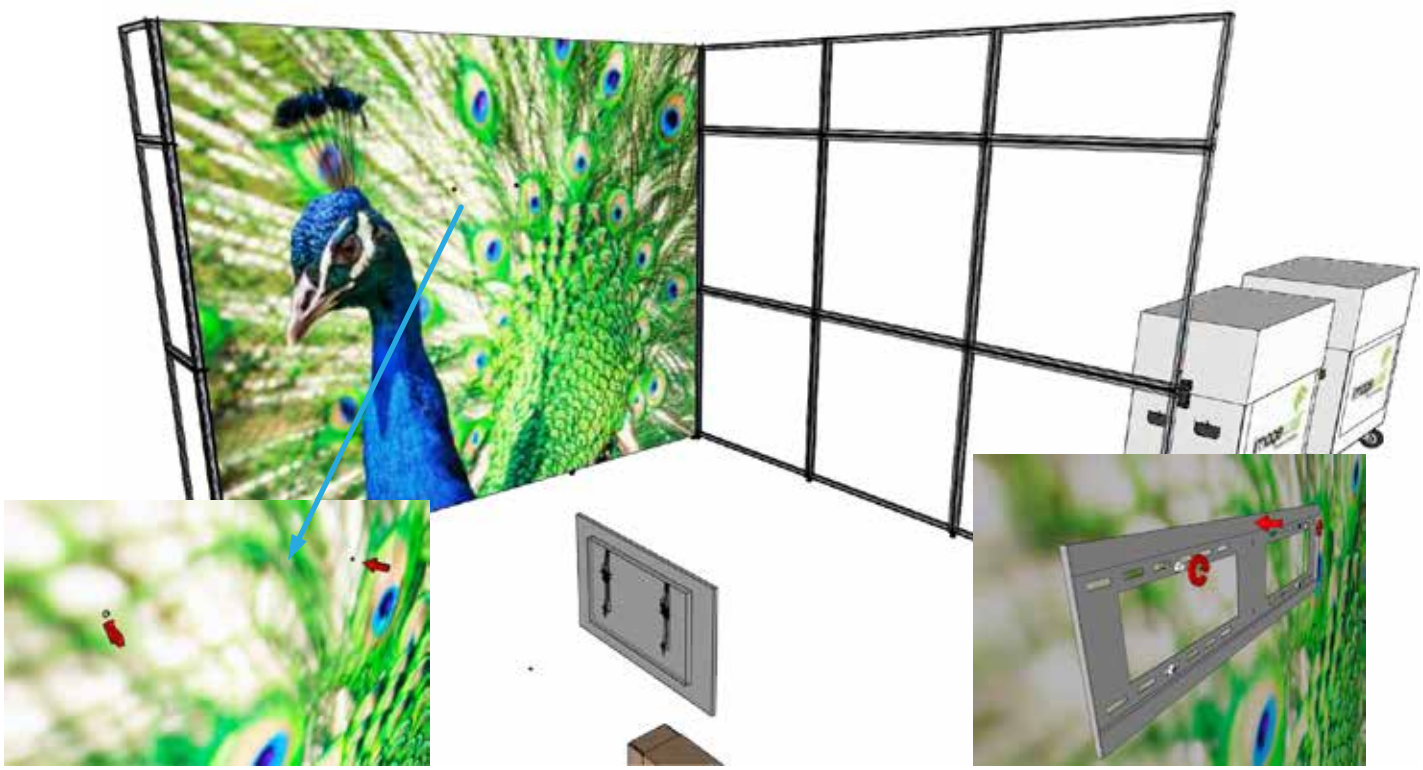

7 With the brackets attached to the TV and cables already in place, hook the TV onto the back plate. It should hook and lock in securely.

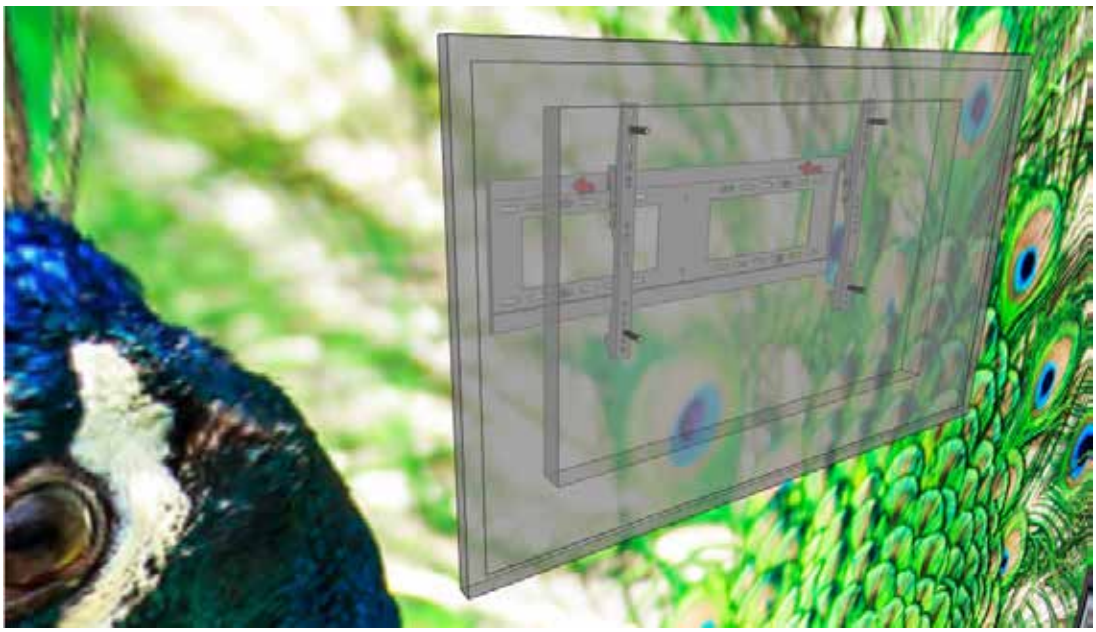

+44 (0)1280 707 180
sales@xg-group.co.uk
www.xg-group.co.uk