



IMAGEWALL | HOW TO GUIDE HOW TO CORNER EXTRUSIONS

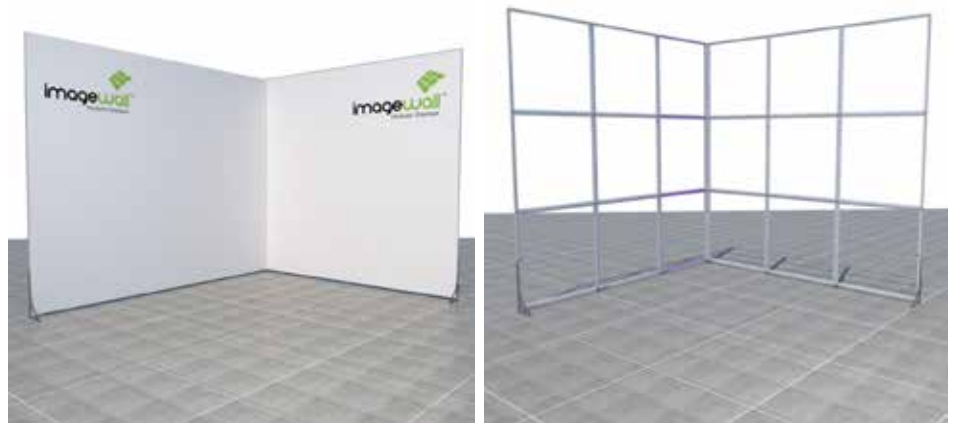

ASSEMBLY INSTRUCTIONS


Remove all products from packaging.

- 1 To create the first corner, slide the IWA1503 Corner Extrusion onto the IWA1003-1 CA 980 × 980mm frame and connect the bottom with the IWA3004 IW (Type B) 3mm U Adjustable Foot Connector M6. Insert the second frame, and again secure with the IWA3004 IW (Type B) 3mm U Adjustable Foot Connector M6.

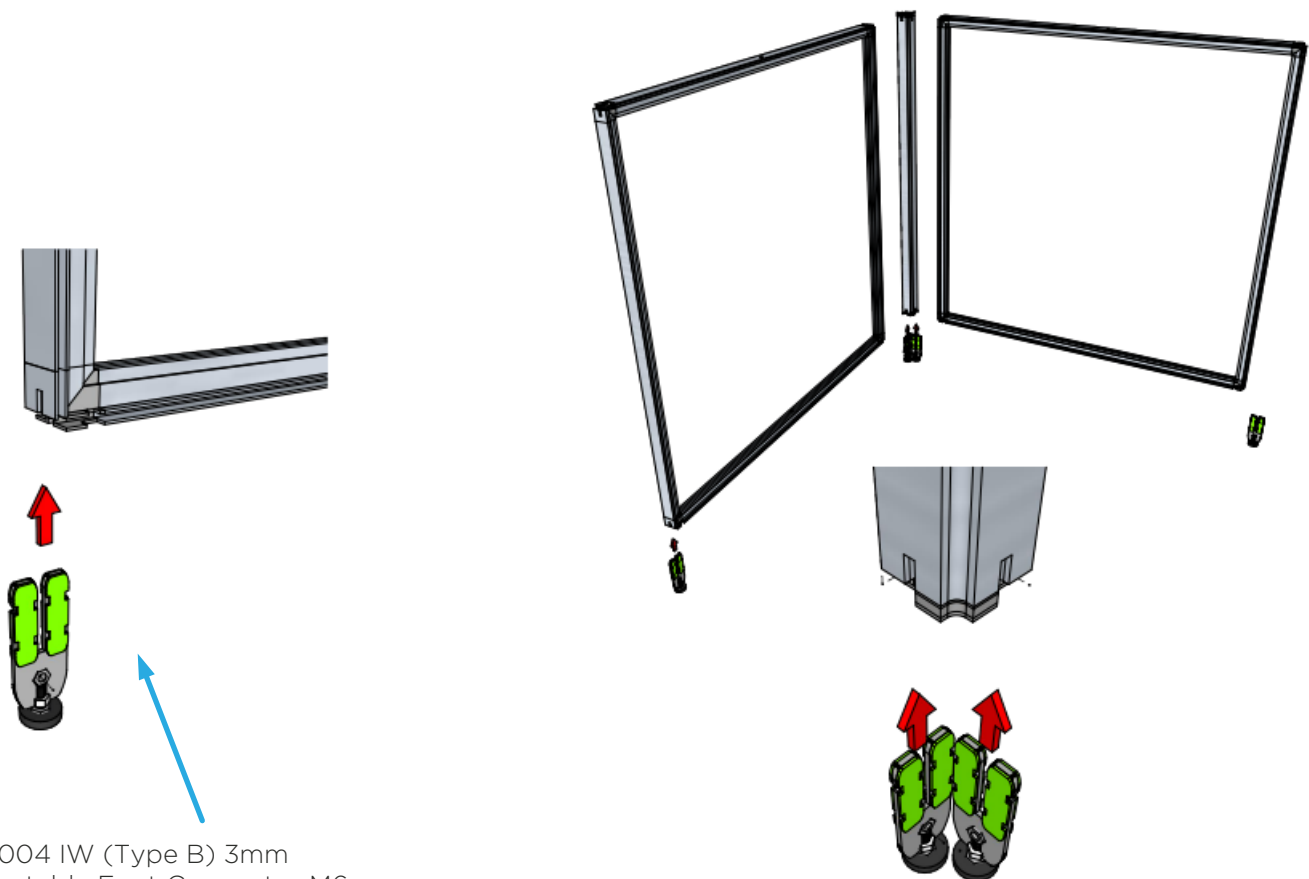


IWA3004 IW (Type B) 3mm
U Adjustable Foot Connector M6


- 2 Secure the frames using the IWA3009-1 E H Connectors.

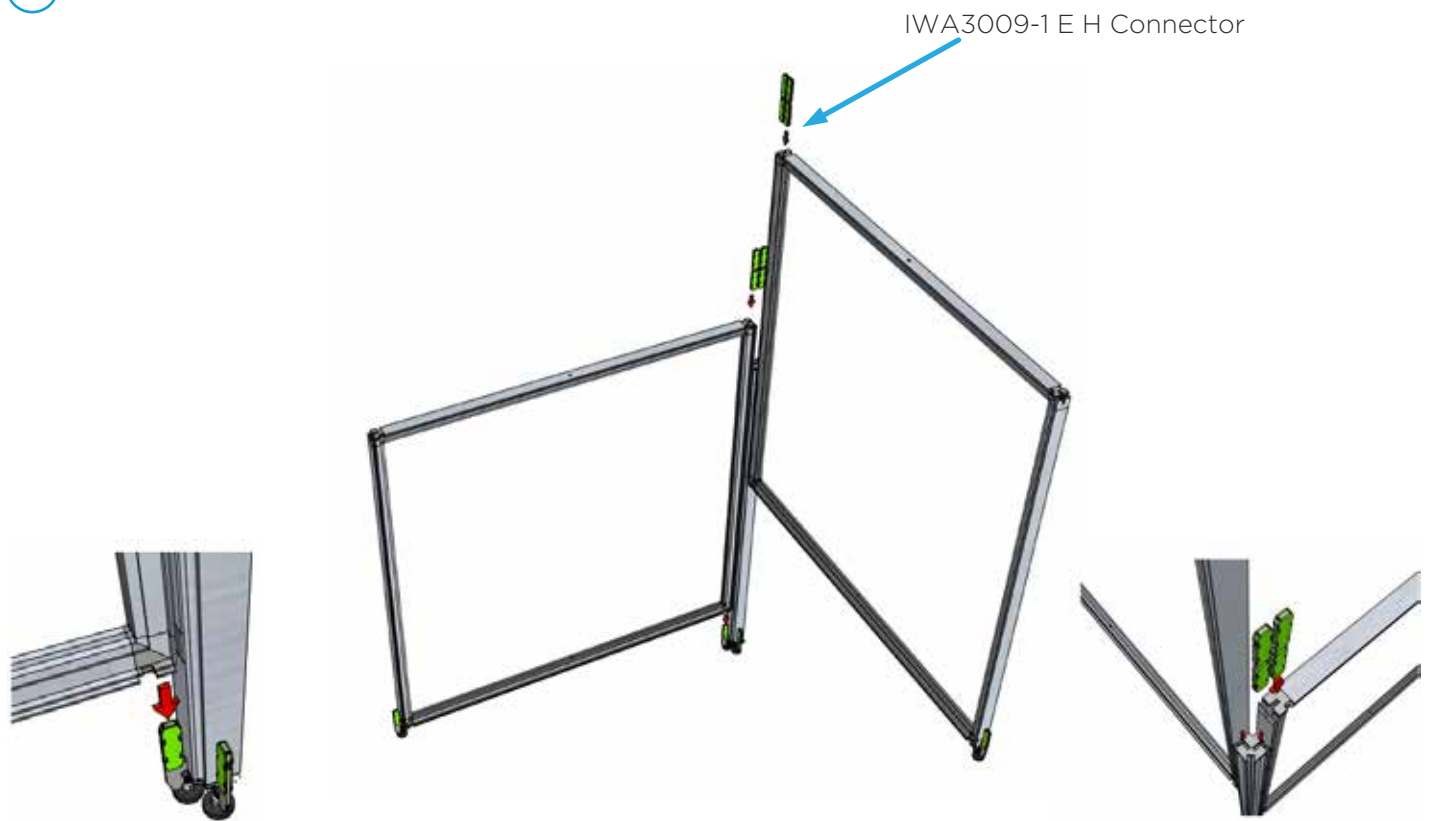


- 3 Then, add additional frame components to your required size.

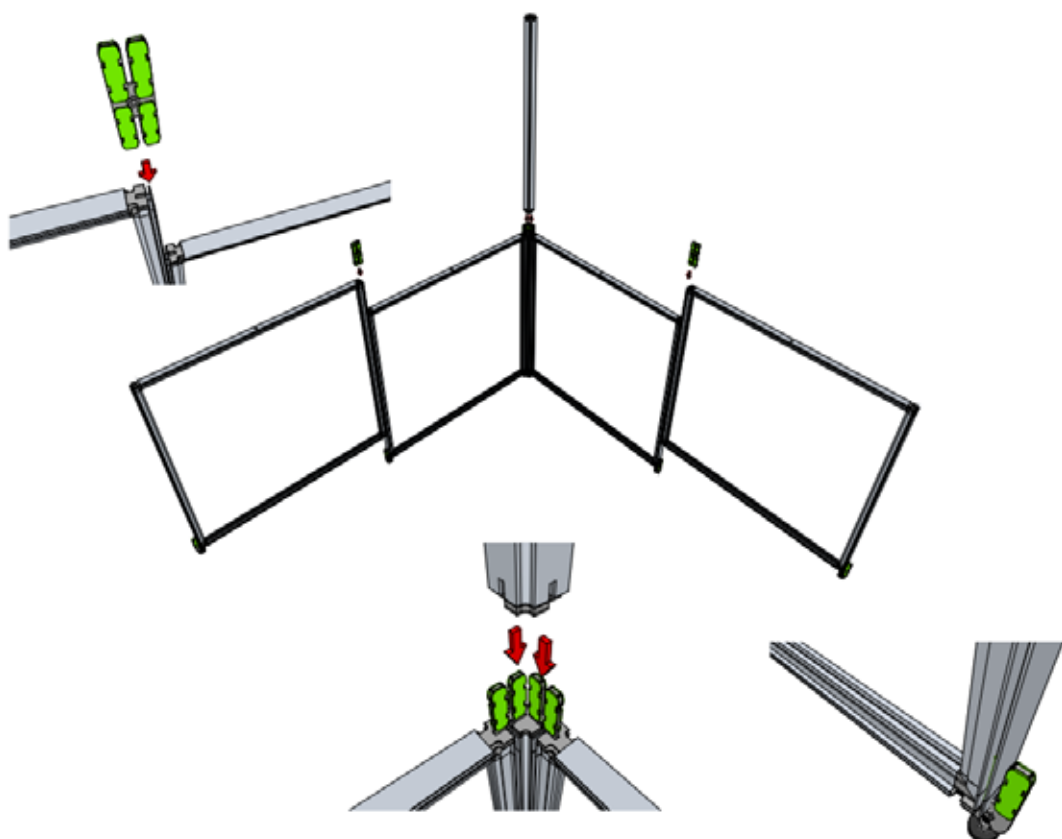

- 4 Next, add the next level of frames by sliding the frame into the IWA1503 Corner Extrusion and securing it using the IWA3009-1 E H Connectors.

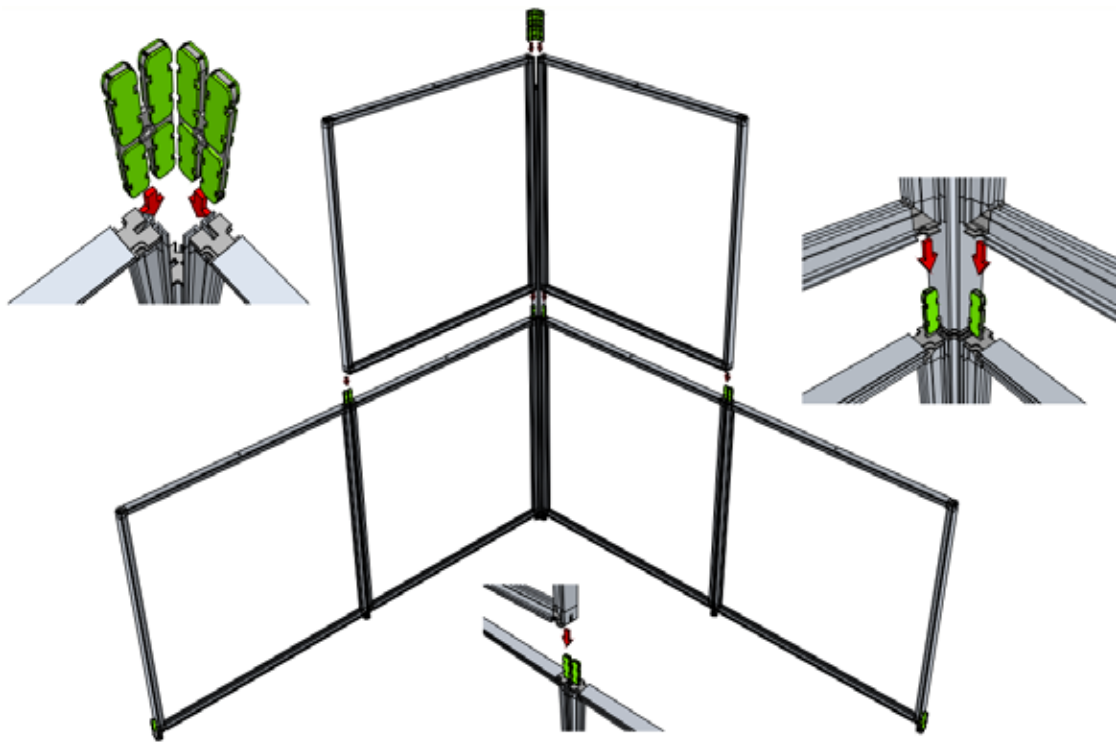

- 5 Continue repeating these steps until the required height is achieved.

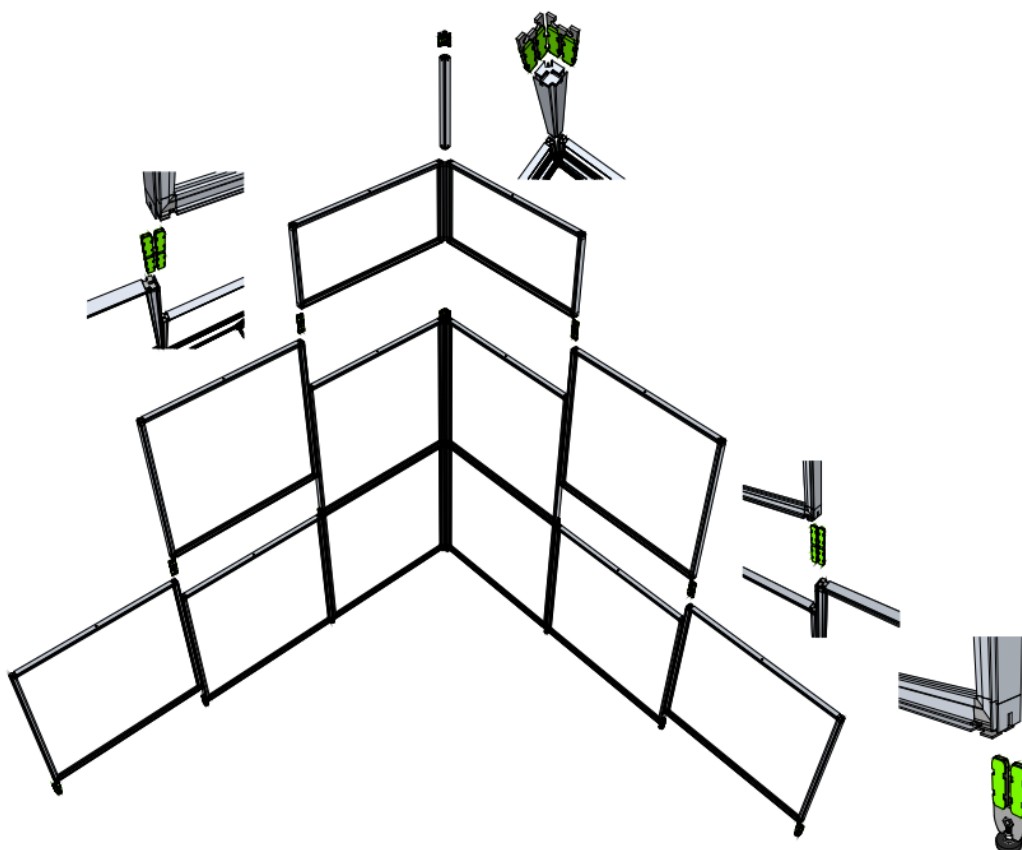

- 4 Once complete, you will have a clean, professional corner display system.

