


Roller Blinds

MEASURING GUIDE



Recess fitting

Measure the full width and height of the recess [the size of the hole if you like] and we will make the appropriate deductions to ensure a perfect fit.

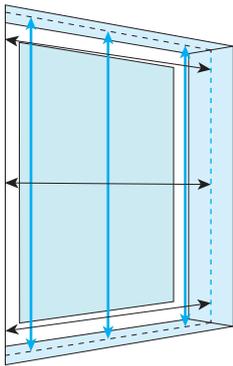


- Measure in 3 places for both the width and the drop. For the width, compare the measurement at the top of the recess with the smallest of the measurements you've taken - if the difference between those is less than 25mm, use the measurement at the top of the recess. If it is not, use the smallest measurement.
- Don't make any deductions, we'll deduct from the width to ensure your blind fits perfectly (3mm).
- Use a metal tape measure, cloth ones can stretch and give you inaccurate measurements

Top-Tip: Check that your recess is deep enough to fit the blind into, also bearing in mind any obstructions such as handles (see table).

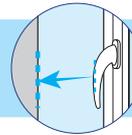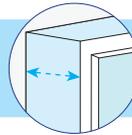

Standard Roller Depth	
Top-Fix	Face-Fix
50mm	70mm




Exact fitting

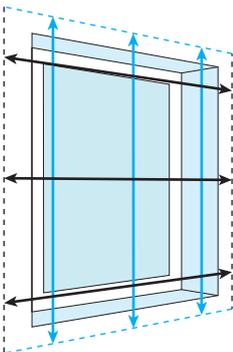

Measure the full width and height of the recess [the size of the hole if you like] and add a little extra to the top and to each side, we will make the blind to the size you specify with no deductions.

- To minimize light leakage we recommend that the blind overlaps the window recess by at least 70mm at the top and 50mm each side
- The overlap at the bottom of the blind is a matter of personal choice but please take into account obstacles **such as radiators**

Top-Tip: If you are replacing an existing blind with one of the same size, simply measure the blind (including its fittings) and specify exact fitting, we will make you one the same size.

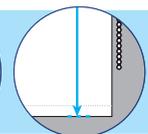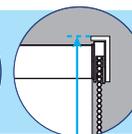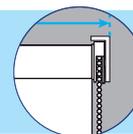

Top-Tip: The overall width of a roller blind, including its brackets, is approximately 35mm wider than the width of the fabric. You can choose whether to measure for the full bracket-to-bracket width, or for the width you'd like the fabric to cover.

